
# BetteSupra 700 mm - 850 mm

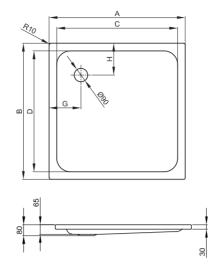



#### Information

Für die Montage empfehlen wir das Fuß-System, Verstellbereich 80 - 200 mm.



### Lieferumfang

Inklusive schallreduzierender Antidröhn-Matten.

## Aufbauhöhen

Ablaufgarnitur	ab
B598-	153 mm
B597-	133 mm
B574-	145 mm
B573-	85 mm

## Abmessung

Bestell-Nr.	Maße in mm	A	В	С	D	G	Н
5720	700 × 700 × 65	700	700	600	600	210	210
5360	750 × 700 × 65	750	700	600	600	235	210
5530	750 × 750 × 65	750	750	650	650	210	210
5680	800 × 700 × 65	800	700	700	600	210	210
5670	800 × 750 × 65	800	750	700	650	210	210
5820	800 × 800 × 65	800	800	700	700	210	210
5780	850 × 700 × 65	850	700	700	600	235	210
1570	850 × 750 × 65	850	750	700	650	235	210
1590	850 × 850 × 65	850	850	700	700	235	235


# BetteSupra = 900 mm





### Information

Für die Montage empfehlen wir das Fuß-System, Verstellbereich 80 - 200 mm.

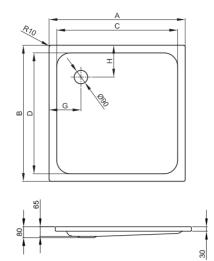

### Lieferumfang

Inklusive schallreduzierender Antidröhn-Matten.

## Aufbauhöhen

Ablaufgarnitur	ab
B598-	153 mm
B597-	133 mm
B574-	145 mm
B573-	85 mm

# Abmessung

Bestell-Nr.	Maße in mm	A	В	С	D	G	Н
8610	900 × 600 × 65	900	600	800	500	210	210
5710	900 × 700 × 65	900	700	800	600	210	210
5770	900 × 750 × 65	900	750	800	650	210	210
5970	900 × 800 × 65	900	800	800	700	210	210
1560	900 × 850 × 65	900	850	800	700	210	235
5920	900 × 900 × 65	900	900	800	800	210	210